



SOFTSHADE OPEN AND CLOSED CASSETTE


 
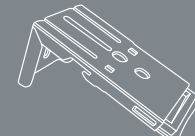
V1

FITTING INSTRUCTIONS


YOU SHOULD HAVE

OPEN OR CLOSED SYSTEM
BLINDS

ONE OF THE FOLLOWING
BRACKET SETS

- 
- Open System Top Fix Brackets
- 
- Open System Face Fix Brackets
- 
- Closed System Brackets

SAFETY DEVICES


- 
- P-Clip

COVER CAPS



TOOLS REQUIRED

- Screwdriver
- Pencil
- Power-Drill
- Tape Measure

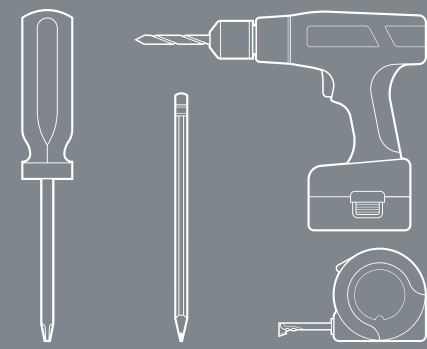

STEP 1


THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY.

OUTSIDE RECESS

If the blind is to be fitted outside the window ensure that measurement C is the same. Follow instructions for FACE FIXING. To calculate $C=(A-B)/2$.

INSIDE RECESS

TOP FIX to the lintel. FACE FIX bracket to the window frame.

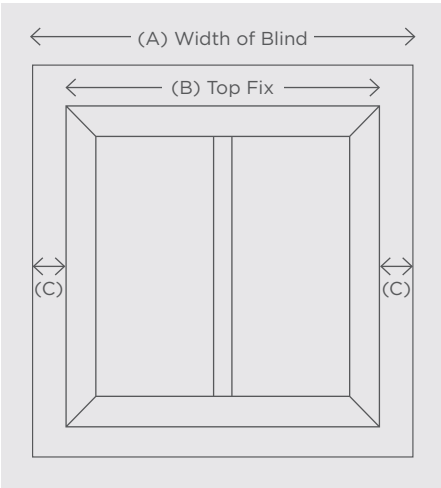


STEP 2

Carefully unwrap the roller blind and its associated brackets.


FITTING THE BRACKETS

For a blind up to 1 metre wide attach two brackets fitted approximately 50mm (2”) from each end of the blind. Any intermediate brackets should be spaced evenly between these and as a general rule:

- Up to 1000mm = 2 brackets
- 1001mm to 1500mm = 3 brackets
- 1501mm to 2000mm = 4 brackets
- 2001mm to 2500mm = 5 brackets.

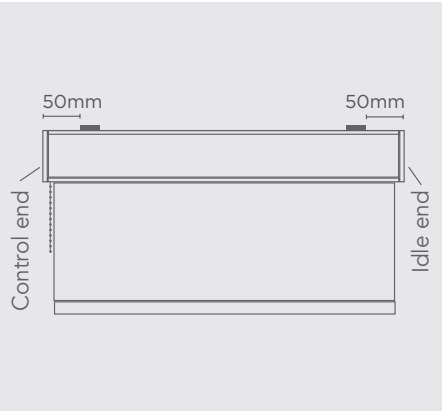


Open System Top Fix Bracket release lip must face the back of the blind.

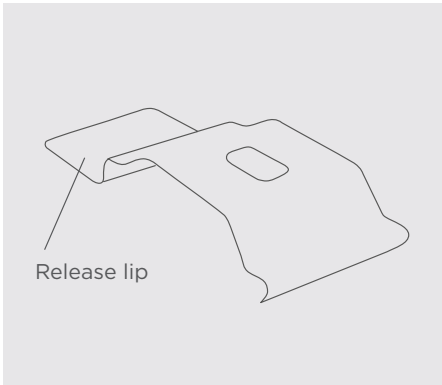

STEP 3


Place the cover caps onto each side of the blind.

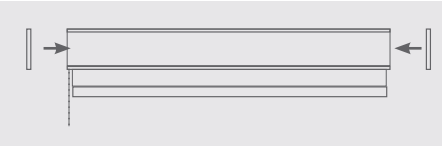

STEP 4


FITTING THE OPEN SYSTEM (TOP FIX)

When brackets have been fitted, hook the ridge on the top of the blind into the front of the brackets, then tilt and push its back until it clicks into the back part of the brackets.

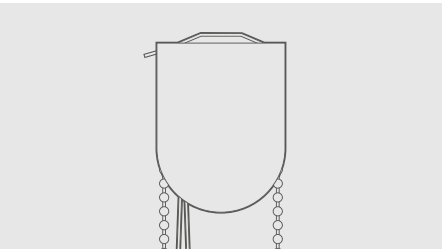

FITTING THE OPEN SYSTEM (FACE FIX)



Hook the back of the blind into the brackets and rotate it into position. Secure by tightening the short screws in the front of the brackets.

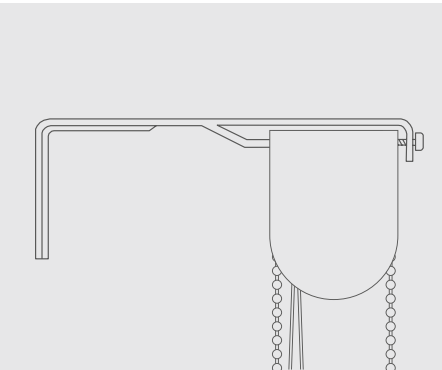

STEP 5

FITTING THE CLOSED SYSTEM

When brackets have been fitted, hook the ridge on the top of the blind into the front of the brackets, then push to the back, tilt up and release so it latches at the back of the brackets.

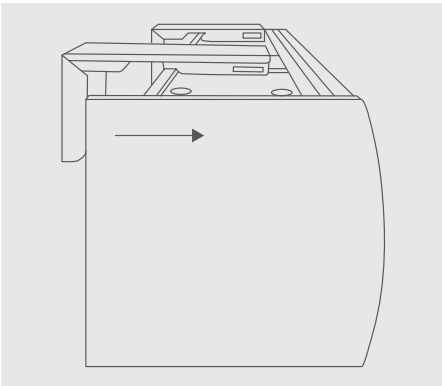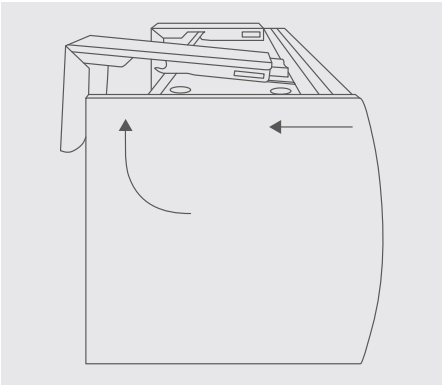

STEP 5

SAFETY DEVICE

(If your blind is supplied with a child safe easy break chain connector, there is no requirement to fit an additional child safety device. This section can be skipped.)

The safety device must be installed at the maximum distance possible from the control mechanism to prevent looped chain becoming slack.


Place the safety device on the wall and mark the positioning of the 2 screw holes.

Drill holes using a suitable drill bit. Place device into position ensuring the chain is fully taut.



FITTING THE SAFETY DEVICE

Screw the safety device securely to the wall using suitable fixings.

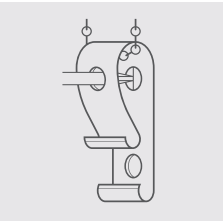


CHILDREN CAN STRANGLE IF A SAFETY DEVICE IS NOT INSTALLED. ALWAYS USE A SAFETY DEVICE TO KEEP CORDS AND CHAINS OUT OF REACH OF CHILDREN.

Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

OPERATION

To operate the blind, gently pull the operating chain closets or furthest from the window.

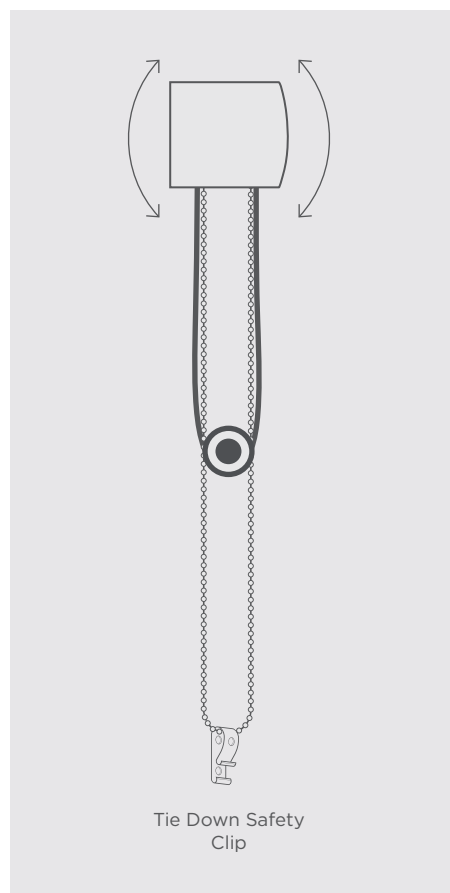

MAINTENANCE


The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk.

If any maintenance is required we recommend that the work is carried out immediately by a reputable blind company.

TROUBLESHOOTING


FABRIC RUN-OFF

Diagram 1 shows the fabric running off from the right-hand side of the blind. To correct the run-off, unroll the fabric, place a 25mm piece of sticky tape onto the tube (Diagram 2) at the opposite end of the blind to the run-off. Fully wind the blind up. Repeat until the fabric is no longer running-off.

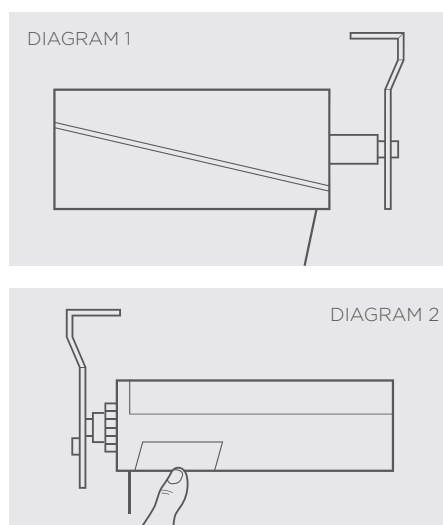

RIPPLED FABRIC

If there is a ripple in the fabric, check the blind is installed horizontally (use a spirit level) and check the fabric is centred in the headbox.

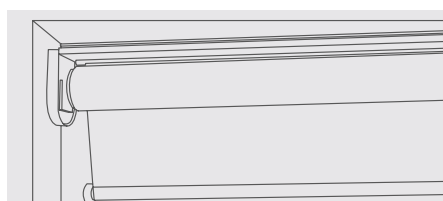


If the blind is installed at an angle, insert packers in the window recess to ensure the recess is straight and the brackets are level.



FABRIC ALIGNMENT

If the fabric edges are not aligned on the blind, slide the fabric that is attached to the headrail profile left or right so that both fabric edges are correctly aligned.

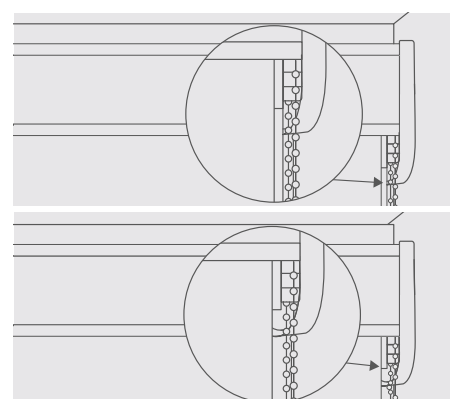

**make it
safe**

BBSA
BRITISH BLIND & SHUTTER ASSOCIATION



WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.
To avoid strangulation and entanglement, keep cords out of the reach of young children.

Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.